



MP300 Mobile Printer

Quick Start Guide

1


Install Battery

1. Unlock the battery door by sliding the battery door tab down.
2. Open the battery door to a 90 degree angle (Do Not Force Open).
3. Insert the battery as shown (Non-contact end first - let the contact end drop into place).
4. Close the battery door by sliding the battery door tab up.



Note: Ensure that the battery side with two contact terminals are facing down, making contact with the spring probes inside the battery compartment.

Overview

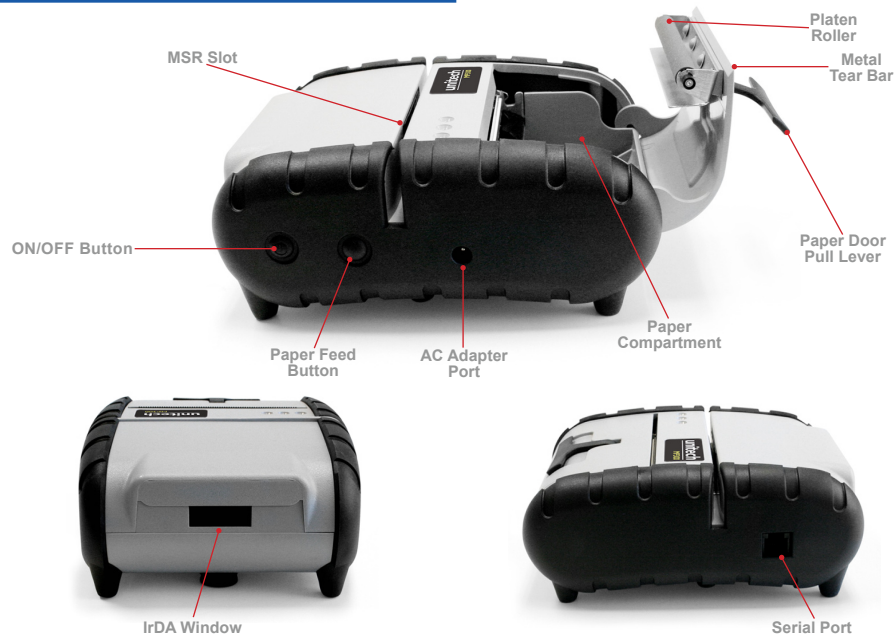

2

Charge Battery

1. Plug the AC adapter output cable into the AC adapter port.
2. Plug the AC adapter output cable into the appropriate AC line voltage socket.
3. The LED will illuminate indicating that the battery is being charged.
4. After 180 minutes of fast charging the LED will turn off.



3 Install Paper

1. Open the paper supply cover by placing your fingers under the "T" paper door pull lever, and pull up firmly on the supply cover until the lever stops moving.
2. Place the paper roll in the paper compartment. Make sure the paper supply unwinds from the bottom with the thermal side closest to the print-head.
3. Unroll about three inches of paper, and position the paper between the print-head guides.
4. Close the paper supply cover.
5. Turn on the printer by pressing the on/off button, and test the paper advance function by pressing the paper feed button. Verify that the paper advances correctly.

Note: The paper door release button must be depressed when opening and closing the paper door.



4 Tear Paper

The printer's paper door acts as a tear bar.

1. To tear paper, pull one edge of the paper against the tear bar, as shown.
2. Tear down and across against the tear bar.



Note: Using the tear bar is the only way to rip the paper. Pulling up and sideways without using the tear bar can cause a paper jam due to paper misalignment in the print-head mechanism.

5 Power On the Printer

1. Press the on/off button to turn the printer on.



2. The three LED indicators located on the top of the printer indicate the various printer functions, as described below.

LED Indicator	State	Status
LED 1	Purple or Orange	Low Power Mode (In Bluetooth mode, the LED is purple. In RS232, mode the LED is orange).
	Green	The power is on, and the printer is in RS232 or IrDA mode.
	Blue	The power is on, and that the printer is in Bluetooth mode.
LED 2	Yellow	The battery charger is charging the battery at a fast rate. If the battery is below 5V, the battery is being "trickle-charged" until the battery voltage reaches 5V, and then the fast-charge rate starts. The LED will turn off when the battery is fully charged.
LED 3	Green	Indicates that the MCR is ready to accept data.
	Red	Indicates a fault condition or a printer error, and the printer is not ready to accept data. The printer is out-of-paper.

6 Self-Test

1. Turn the printer off.
2. Press and hold the paper feed button.
3. While holding the paper feed button, press the on/off button.
4. The printer will start printing the self-test messages. Release the paper feed and on/off buttons.



Note: The first few lines of the self-test show the printer firmware version, the current printer settings (for example IrDA or Serial mode) and a list of any optional or special features installed.

Sample Test Receipt