
MS916 Quick Start Guide

unitech



The Unitech Wireless(BT) Pocket Laser Scanner

Step 1: Connect and Charge

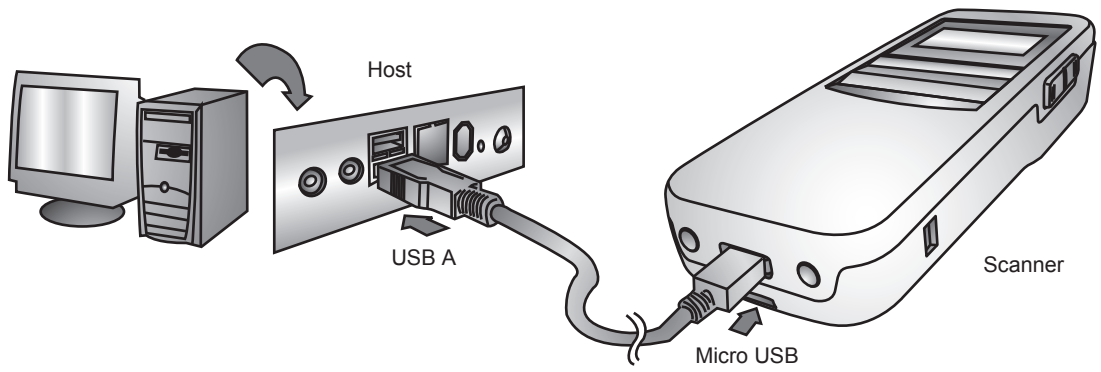

Insert the Micro USB connector into the port on the scanner and the standard USB connector of the USB cable into a USB port on the host PC.

Step 2: Pairing with PC/Notebook

Following steps are based on Microsoft Windows 7.

1. Turn on MS916 and then press the Page Down button and Scan Key simultaneously to enter BT Pairing mode or you can press Page Up and Page Down button simultaneously to enter main menu, then choose Bluetooth CFG , finally choose BT Pairing.
2. Open **Devices and Printers** by clicking the **Start** button , and then, on the **Start** menu, clicking **Devices and Printers**.
3. Click **Add a device**, and then follow the instructions.
4. Click the Bluetooth enabled device (**MS916-[XXXXXX]**) you want to add to your computer, and then click **Next**. If you don't see the device you want to add, make sure the device is turned on and discoverable. If you just turned on the device, it may take Windows several seconds to detect it.



Step 3: Paring with mobile devices

Go to your host device (phone/tablet/computer) settings and turn on the Bluetooth function.

The MS916 will appear on your device as "MS916-XXXXXX".

Select/Press "MS916-XXXXXX".

If you have Bluetooth 2.1, "MS916-XXXXXX" will now appear as paired. Your host device is now paired with the MS916.

If your MS916 and host device have successfully paired, please proceed to Step 4: "Test & Finish". If you are prompted to enter a pincode, please enter the number "2916" to pair.

Step 4: Test & Finish

Open a word processing program such as Microsoft Word or Notepad on your host. Now scan the following barcode:

If the word "Unitech" appears on the screen you have succesfully installed your scanner. Congratulations!

Step 5: MS916 TIPS

• The MS916 should be recognized as a generic HID device by your host device, similar to a standard keyboard. This allows you to scan into any field you could normally type into.

• If the MS916 is out of Bluetooth range from the host device, it will automatically save any scan data in its buffer memory and automatically upload the scan data to the host when back in Bluetooth range.

• The MS916 can also operate in Batch Mode, where a Bluetooth connection is not required. In Batch Mode, the MS916 saves all scan data in internal memory and then uploads the data when connected to a host. See back page of this guide for more information about modes and settings.

Scanner Type

BT HID *

BT SPP

USB SPP

BT SPP (Slave)

Operation Mode

Wedge

Batch

Auto *

Bluetooth Config

BT Pairing

Paired Device

Remove Pair

System Restore & Info

Factory Default

Display F/W Version

**** For more detail scanner setting, please go to www.ute.com to download the user manual and scanner configuration manager utility**

MS916 Quick Start Guide

unitech

Data & Memory

Send Batch

Erase Last Memory Entry

Free Memory Space

Erase Memory

Beeper & Vibration Control

High Volume

Medium Volume *

Enable Vibrator

Low Volume

Mute

Disable Vibrator *

Power Saving

5 Seconds

10 Seconds

15 Seconds *

20 Seconds

30 Seconds

Disable

Auto Power Off

1 Minute

3 Minutes

5 Minutes *

10 Minutes

15 Minutes

20 Minutes

30 Minutes

Disable

Try a Unitech wireless pocket scanner for your smartphone, tablet, or computer



MS910

All-Purpose Pocket Scanner

- Size of a pack of gum
- Bluetooth compatible with iOS, Android, Windows



MS912

Memory Pocket Scanner

- 2 MB memory
- Auto and Batch scanning



MS920

2d Pocket Scanner

- Reads 1D/2D barcodes
- 2 MB memory
- IP42 environmental seal

© 2015 unitech Electronics Co., Ltd. All rights reserved. unitech is a registered trademark of unitech Electronics Co., Ltd.