



For best results, please follow instructions.

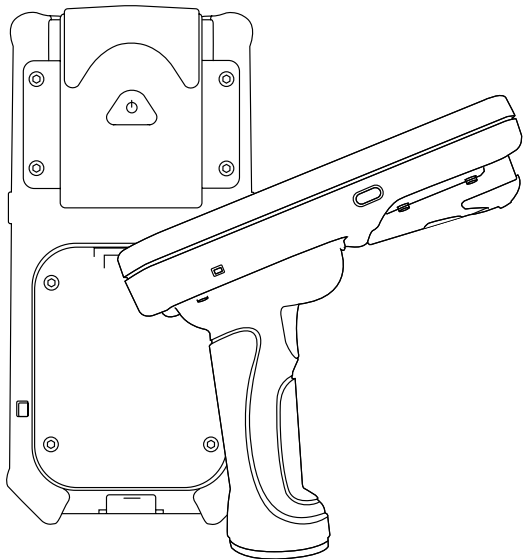

**Compatible with iPhone 16e, 16, 15, 14 & 14 Pro,
iPhone 13 & 13 Pro and iPhone 12 & 12 Pro.**

For XC100 use pages 4-5.

Package Contents

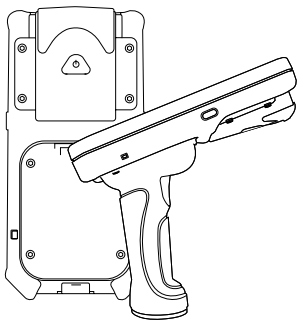


Data Reader



Charging Cable with
USB-C to USB-A
adapter



Allen Wrenches (1 or 2)

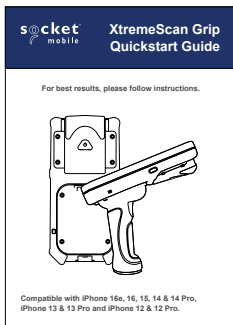

QuickStart Guide

Step 1: Download the Socket Mobile Companion app to set-up your barcode reader.



Scan QR Code with your device to download the Companion app free


Step 2: Register your reader and complete a user survey via the Socket Mobile Companion app to activate a 90-day warranty extension.

If the Companion app cannot be installed, pair your barcode reader directly to the host device.

The steps below assume this is a first time pairing set-up.

1. On host device - turn off Bluetooth.
2. Power on the barcode reader.
3. Select and scan a Bluetooth connection mode barcode (see following page).
4. On host device - turn Bluetooth back on and pair barcode reader.
5. Launch desired application.


Scanner
Power button




You are now ready to start scanning!

For a complete user guide: <https://sckt.tech/downloads>

Step 3: Unscrew the case with a cross-head screwdriver (not included in the package).

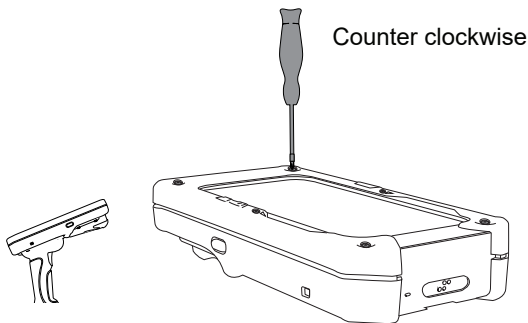


Step 4: Insert the internal charging cable and place the phone inside the case.

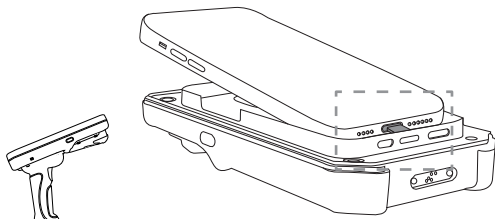


Note: Some models have internal wireless charging and therefore do not have an internal charging cable.

Step 5: Before reassembly, connect the charging cable to the case and verify it charges.

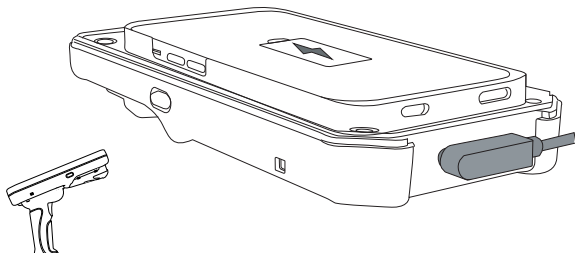


Step 6: Screw the top case down, being careful not to overtighten.

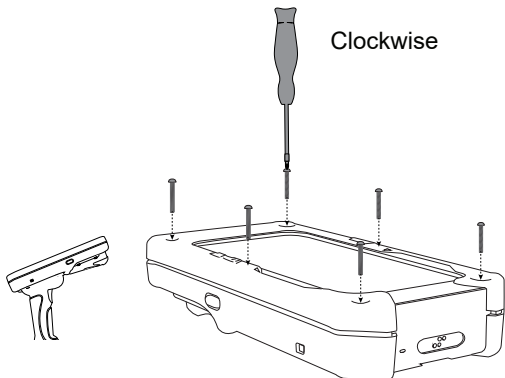

Step 7: Prior to first use - Fully charge your barcode reader.

Use a USB-C wall charger to charge batteries until the battery light turns solid green (up to 8 hours).

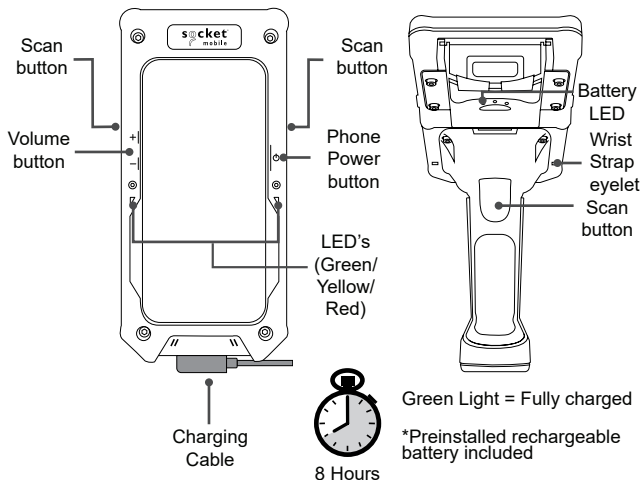

Charging Requirements: Min 5.0 VDC, 1 AMP
Max 5.5 VDC, 3 AMPs



Important: Do not charge Socket Mobile data readers in temperatures above 100°F/40°C, as the reader may not charge properly.



Charging from a computer or laptop USB port will not provide enough power and could cause charging, connection or scanning performance issues.

Need help? Visit <https://sckt.tech/support>

For device set-up: <https://sckt.tech/device-set-up>

For XS930/XG930 (Laser) model - If viewing this guide from the internet, please print barcodes to scan.

Bluetooth Connection Modes

iOS Application Mode (Default)

Use this mode with an Apple app designed for Socket Mobile barcode readers.



Basic Keyboard Mode

Configures the barcode reader to Human Interface Device (HID).



Excludes XG963, XS963, iXG963, iXS963

Factory Reset

Revert all settings to factory defaults. The barcode reader will power off after scanning this barcode.





Add SocketCare extended warranty coverage: <https://sckt.tech/socketcare>

Purchase SocketCare within 60 days from the date of purchase of the barcode reader.

Product Warranty: The barcode reader's warranty period is one year from the date of purchase.

Consumables such as batteries and charging cables have a limited warranty of 90 days. Extend your barcode reader's standard one-year limited warranty coverage up to five years from the date of purchase.

Additional service features are available to further enhance your warranty coverage:

- Warranty period extension only
- Express Replacement Service
- One-Time Accidental Coverage
- Premium Service

Environment

Socket Mobile is committed to combating global climate change. We back up this commitment with sensible, sustainable policies dedicated to achieving tangible results. Learn about the specifics of our environmental practices here: <https://sckt.tech/recycling>

Important Information - Safety, Compliance and Warranty

Safety and Handling

See Safety and Handling in the User Guide: <https://sckt.tech/downloads>

Regulatory Compliance

Regulatory information, certification and compliance marks specific to the Socket Mobile barcode scanner are available in Regulatory Compliance: socketmobile.com/regulatory-compliance.

IC and FCC Compliance Statement

This device complies with Industry Canada license exempt RSS standard(s). This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may cause interference, and (2) this device must accept any interference, including interference that may cause undesired operations.

EU Compliance Statement

Socket Mobile hereby declares that this wireless device is in compliance with the essential requirements and other relevant provisions. Products intended for sale within the European Union are marked with a CE Mark, which indicates compliance to applicable Directives and European Normes (EN), as follows. Amendments to these Directives or ENs are included: Normes (EN), as follows:

CONFORMS TO THE FOLLOWING EUROPEAN DIRECTIVES

- Low Voltage Directives: 2014/35/EU
- RED Directive: 2014/53/EU
- EMC Directive: 2014/30/EU
- RoHS Directive: 2015/863
- WEEE Directive: 2012/19/EC

Battery and Power Supply

The barcode reader contains a rechargeable battery which may present a risk of fire or chemical burn if mistreated. Do not charge or use the unit in a car or similar place where the inside temperature may be over 60 degrees C or 140 degrees F.


Limited Warranty Summary

Socket Mobile Incorporated warrants this product against defects in material and workmanship, under normal use and service, for one (1) year from the date of purchase. Products must be purchased new from a Socket Mobile authorized distributor, reseller or from the SocketStore on Socket Mobile's website: socketmobile.com. Used products and products purchased through non-authorized channels are not eligible for this warranty support. Warranty benefits are in addition to rights provided under local consumer laws. You may be required to furnish proof of purchase details when making a claim under this warranty.

For more warranty information: <https://sckt.tech/socketcare>




最良の結果を得るために、ユーザーガイドの指示に従いましょう。

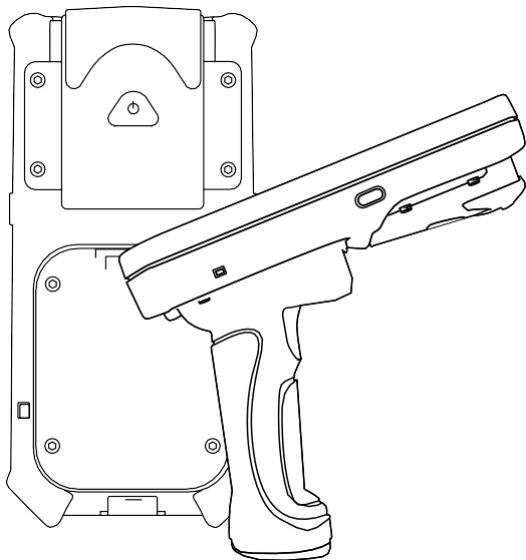


iPhone 16e、16、15、14および14 Pro、
iPhone 13および13 Pro、iPhone 12および12 Proに対応。

XC100については、4～5ページをご参照ください。

パッケージ内容

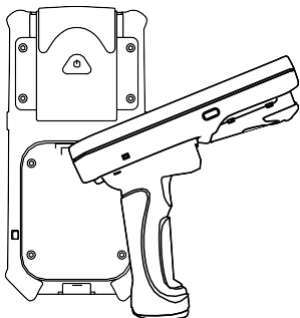


データリーダー

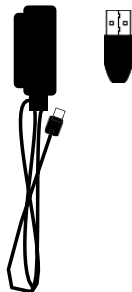

USB-CからUSB-Aへのアダプター付き充電ケーブル



六角レンチ（1本または2本）

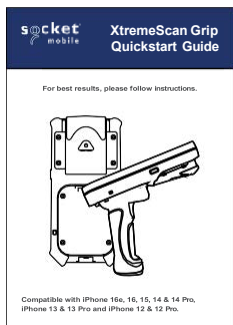

socket
mobile

XtremeScan Grip
Quickstart Guide

For best results, please follow instructions.

Compatible with iPhone 16e, 16, 15, 14 & 14 Pro,
iPhone 13 & 13 Pro and iPhone 12 & 12 Pro.

ユーザーガイド

ステップ1：バーコードリーダーを設定するために、Socket Mobile Companionアプリをダウンロードしてください。



QRコードをお使いのデバイスでスキャンし、Companionアプリを無料でダウンロードしてください。


ステップ2：Socket Mobile Companionアプリを使用してバーコードリーダーを登録し、ユーザーアンケートに回答すると、90日間の保証延長が有効になります。

Companionアプリをインストールできない場合は、バーコードリーダーをホストデバイスに直接ペアリングしてください。

以下の手順は、初めてペアリングを行う場合を想定しています。

1. ホストデバイスのBluetoothをオフにします。
2. バーコードリーダーの電源を入れます。
3. Bluetooth接続モードのバーコードを選択してスキャンします（次のページを参照）。
4. ホストデバイスでBluetoothを再度オンにし、バーコードリーダーとペアリングします。
5. 使用したいアプリケーションを起動します。


スキャナーの
電源ボタン




これでスキャンの準備が整いました。

ユーザーガイドの詳細はこちら：<https://sckt.tech/downloads>

ステップ3：プラスドライバー（パッケージには含まれていません）を使用してケースのネジを外してください。

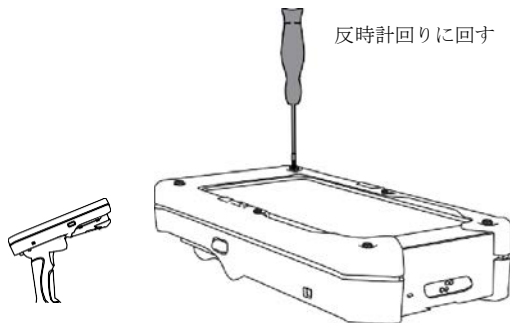


ステップ4：内部充電ケーブルを挿入し、スマートフォンをケース内に収めてください。

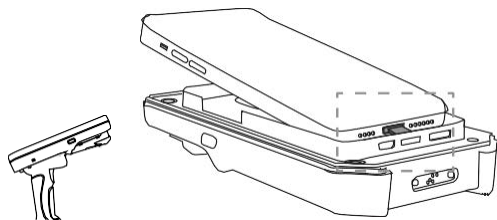


注) 一部のモデルは内臓ワイヤレス充電に対応しているため、内部充電ケーブルがありません。

ステップ5：再組み立ての前に、充電ケーブルをケースに接続し、充電ができることを確認してください。

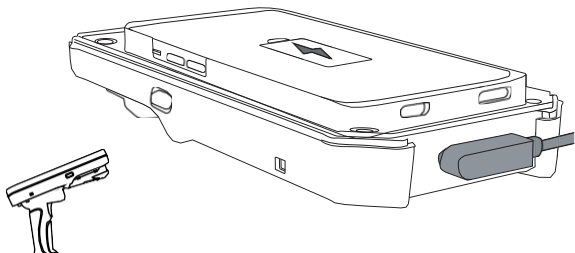


ステップ6：トップケースをネジで固定します。締めすぎないように注意してください。

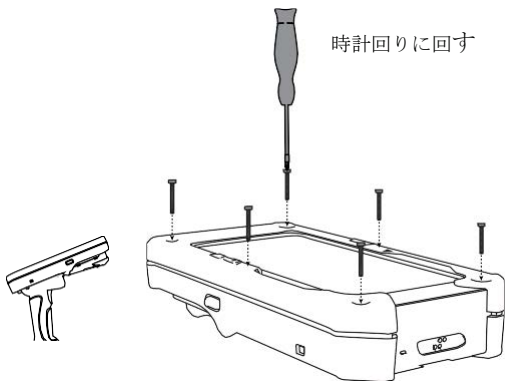

ステップ7: 最初に使用する前に、バーコードリーダーをフル充電してください。

USB-Cの壁掛け充電器を使用し、バッテリーランプが緑色の点灯になるまで充電してください（最大8時間）。

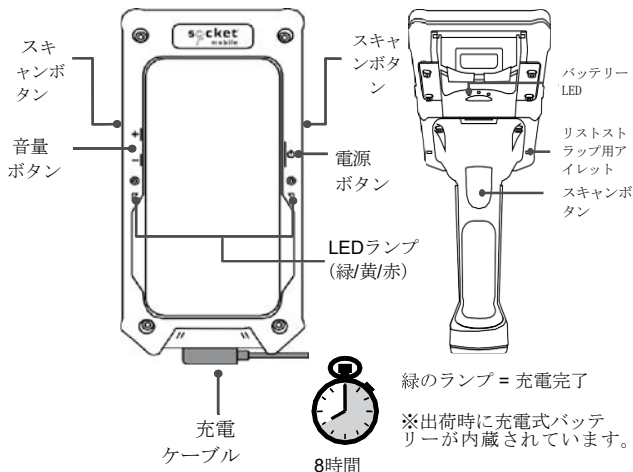

緑のランプ = 充電完了

※出荷時に充電式バッテリーが内蔵されています。

充電要件：最小5.0 VDC, 1アンペア
最大5.5 VDC, 3アンペア



重要：ソケットモバイルのデータリーダーは、40℃を超える温度下では充電しないでください。正しく充電されない可能性があります。



コンピューターやノートパソコンのUSBポートからの充電では電力が不十分なため、充電や接続、スキャン性能に問題が生じる可能性があります。

ヘルプが必要な方は：<https://sckt.tech/support>

デバイスのセットアップについて：<https://sckt.tech/device-set-up>

XS930/XG930 (レーザー)モデルの場合 – インターネットからこちらのガイドを閲覧している場合は、スキャン用のバーコードを印刷してください。

Bluetooth接続モード

iOSアプリケーション モード (デフォルト)

このモードは、ソケットモバイルのバーコードリーダー向けに設計されたAppleのアプリで使用してください。



ベーシックモード

バーコードリーダーをヒューマンフェイステデバイス (HID) として設定しています。



**XG963, XS963, iXG963,
iXS963を除く。**

ファクトリーリセット

すべての設定を工場出荷時の状態にリセットします。このバーコードをスキャンすると、バーコードリーダーの電源が切れます。





SocketCare延長保証を追加： <https://sckt.tech/socketcare>

バーコードリーダーの購入日から60日以内にSocketCareを購入してください。

製品保証：バーコードリーダーの保証期間は購入日から1年間です。バッテリーや充電ケーブルなどの消耗品は90日間の限定保証となります。標準の1年限定保証を、購入日から最長5年間まで延長できます。さらに、保証内容を強化する追加サービスもご利用いただけます。

- 保証期間の延長のみ
- 即時交換サービス
- 一度限りの偶発的損傷補償
- プレミアムサービス

環境への取り組み

ソケットモバイルは、地球規模の気候変動の対策に真剣に取り組んでいます。弊社では実際の成果を目指す合理的で持続可能な方針によって、この取り組みを支えています。弊社の環境保全活動の詳細については、こちらをご覧ください：<https://sckt.tech/recycling>

重要情報 - 安全性、適合性、保証について

安全性と取り扱いについて

ユーザーガイドの「安全性と取り扱い」セクションをご覧ください：<https://sckt.tech/downloads>

法規制遵守について

ソケットモバイルのバーコードスキャナーに関する規制情報、認証、および適合マークの詳細は、こちらの「法規制遵守」ページをご覧ください：[scktmobile.com/regulatory-compliance](https://sckt.tech/regulatory-compliance)

ICおよびFCC準拠に関する声明

このデバイスは、カナダ産業者のライセンス免除RSS規格に準拠しており、FCC規格第15条に準拠しています。

動作は以下の2つの条件に従うものとします：

- (1) このデバイスは干渉を引き起こす可能性があります。
- (2) このデバイスは、望ましくない動作を引き起こす可能性のある干渉を含め、いかなる干渉も受け入れられなければならない。

EU準拠に関する声明

ソケットモバイルは、当該ワイヤレス機器が基本的要件およびその他の関連規定に準拠していることをここに宣言します。欧州連合内での販売を目的とした製品にはCEマークが表示されており、これは以下の該当する指令および欧州規格 (EN) に適合していることを示しています。これらの指令またはENの改正も適用されます：

以下の欧州指令に準拠しています：

- 低電圧指令 (Low Voltage Directives) : 2014/35/EU
- 無線機器指令 (RED Directive) : 2014/53/EU
- 電磁両立性指令 (EMC Directive) : 2014/30/EU
- RoHS指令 : 2015/863
- 電気電子機器廃棄物指令 (WEEE) : 2012/19/EC

バッテリーと電源

バーコードリーダーには充電式バッテリーが内蔵されています。不適切に取り扱えば、火災や化学的な火傷の危険があります。車内など、内部温度が60℃を超える場所での充電や使用は避けてください。

限定保証の概要

ソケットモバイル株式会社では、本製品が正常な使用およびサービスのもとで、購入日から1年間、材料および製造上の欠陥に対して保証をしております。製品はソケットモバイルの認定販売代理店、販売店、またはソケットモバイルの公式ウェブサイト (scktmobile.com/jp) のSocketStoreから新品で購入する必要があります。中古品および非認定チャネルで購入された製品は、この保証の対象外です。保証の権利は、現地の消費法で定められた権利に加えて提供されます。保証請求の際には、購入証明書の提示を求められる場合があります。

保証情報の詳細については：<https://sckt.tech/socketcare>



2025年 5 月

6430-00425A